



SECUNORM MIZAR

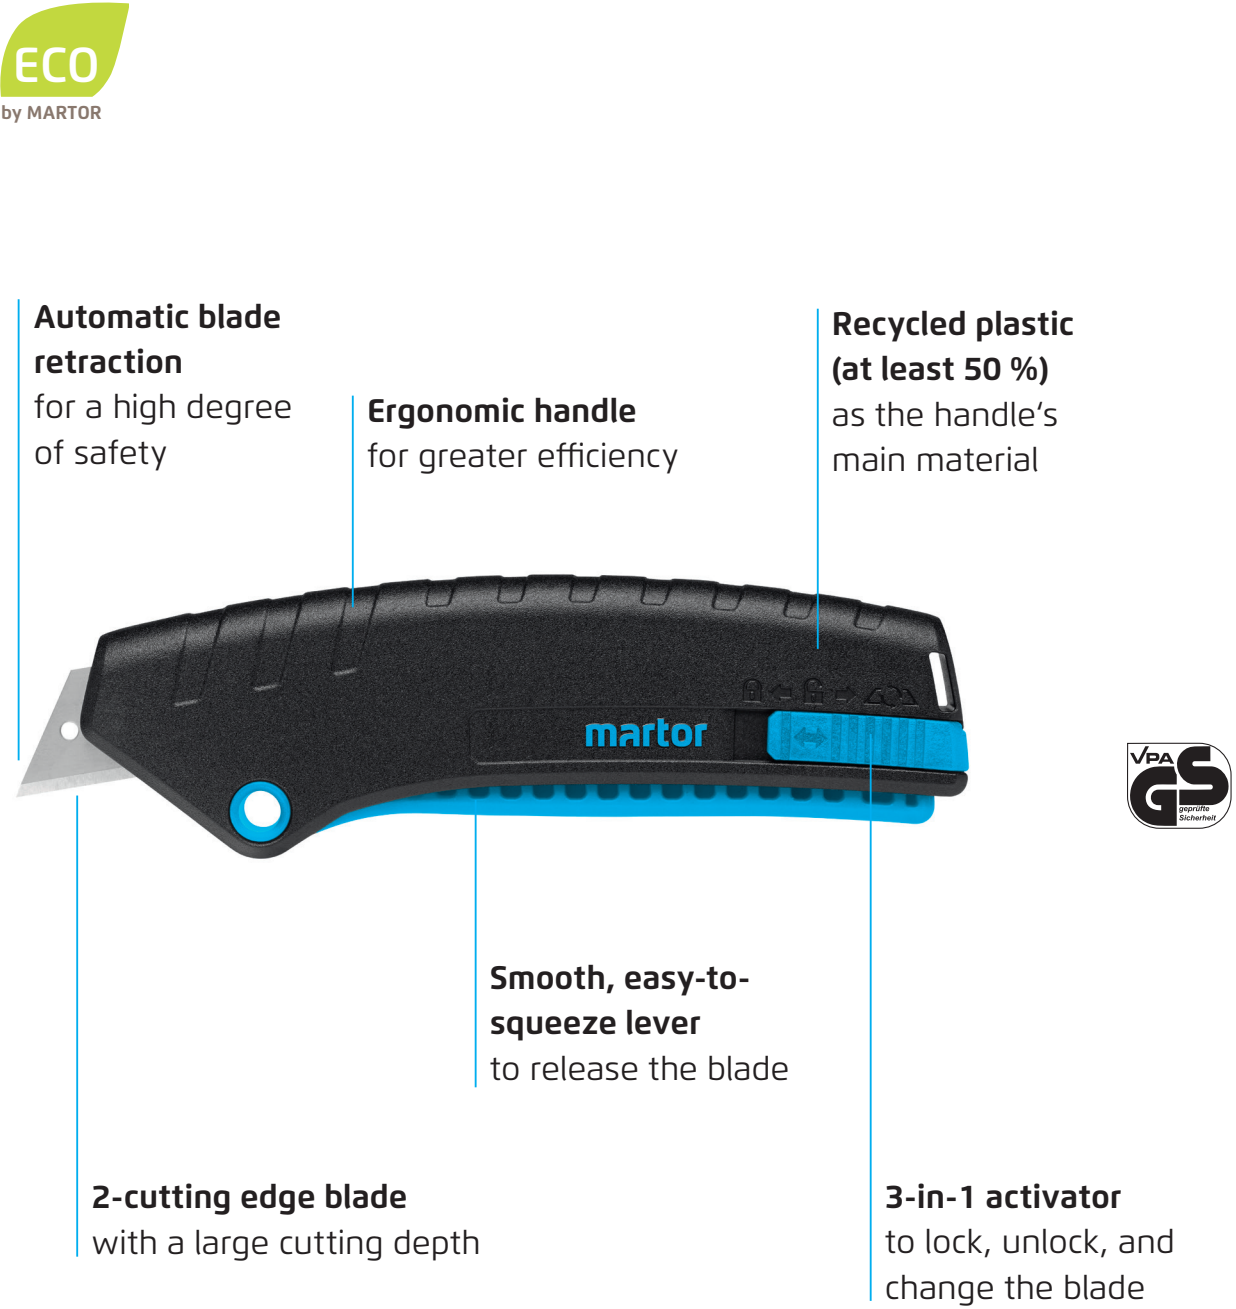


Please note: To ensure your product always functions flawlessly, regularly remove any impurities. For additional safety, we recommend wearing gloves.


USAGE

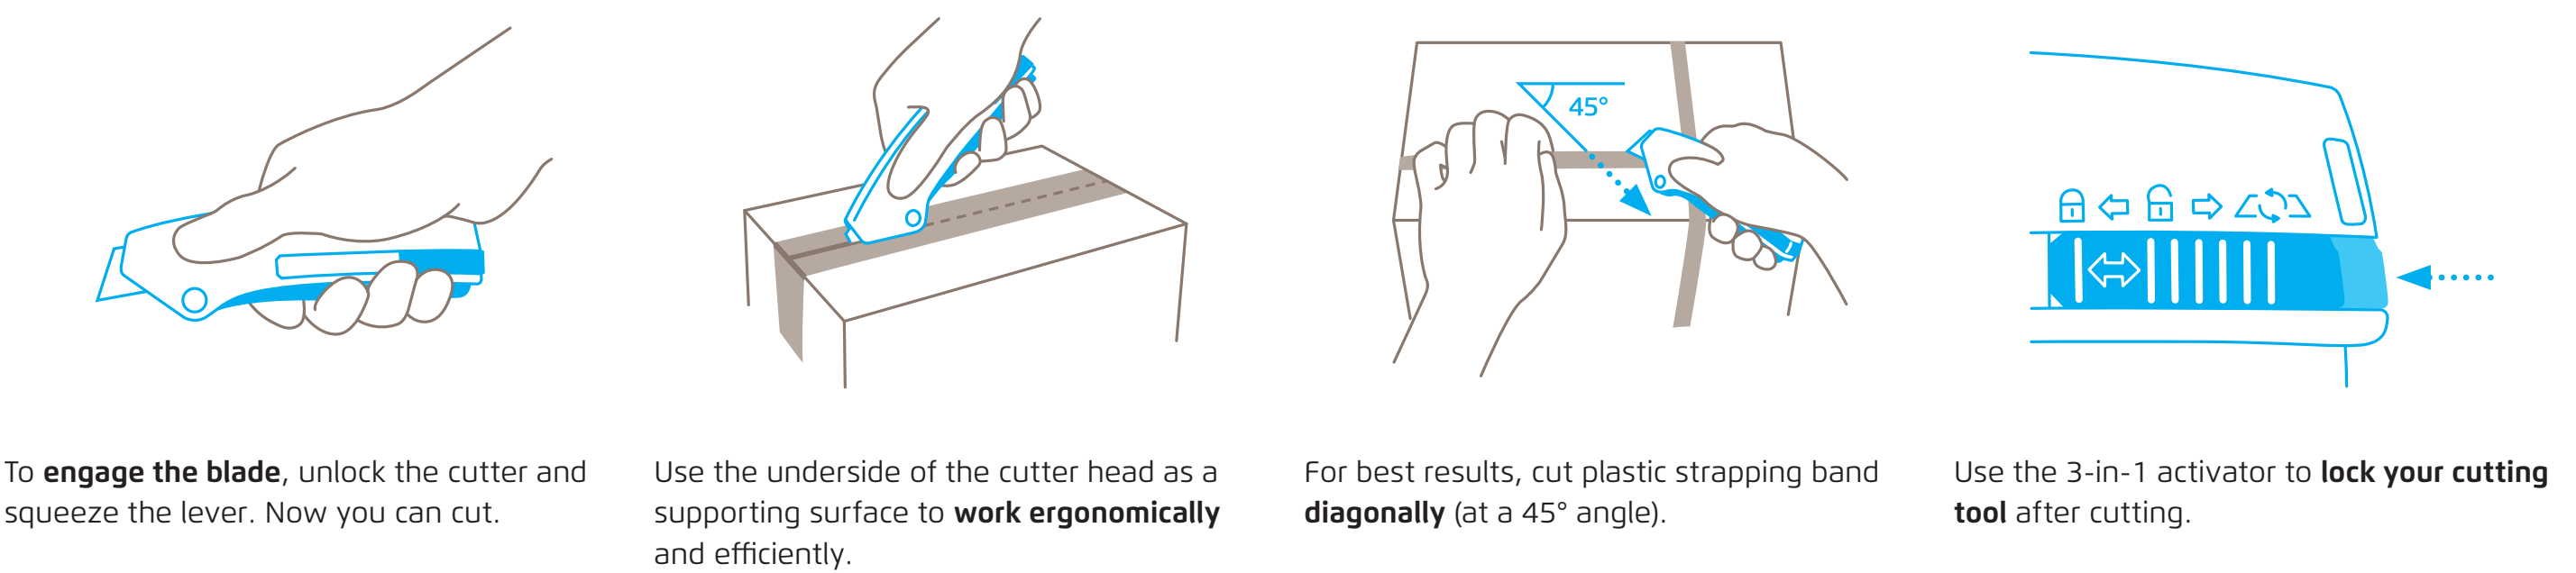

BLADE CHANGE

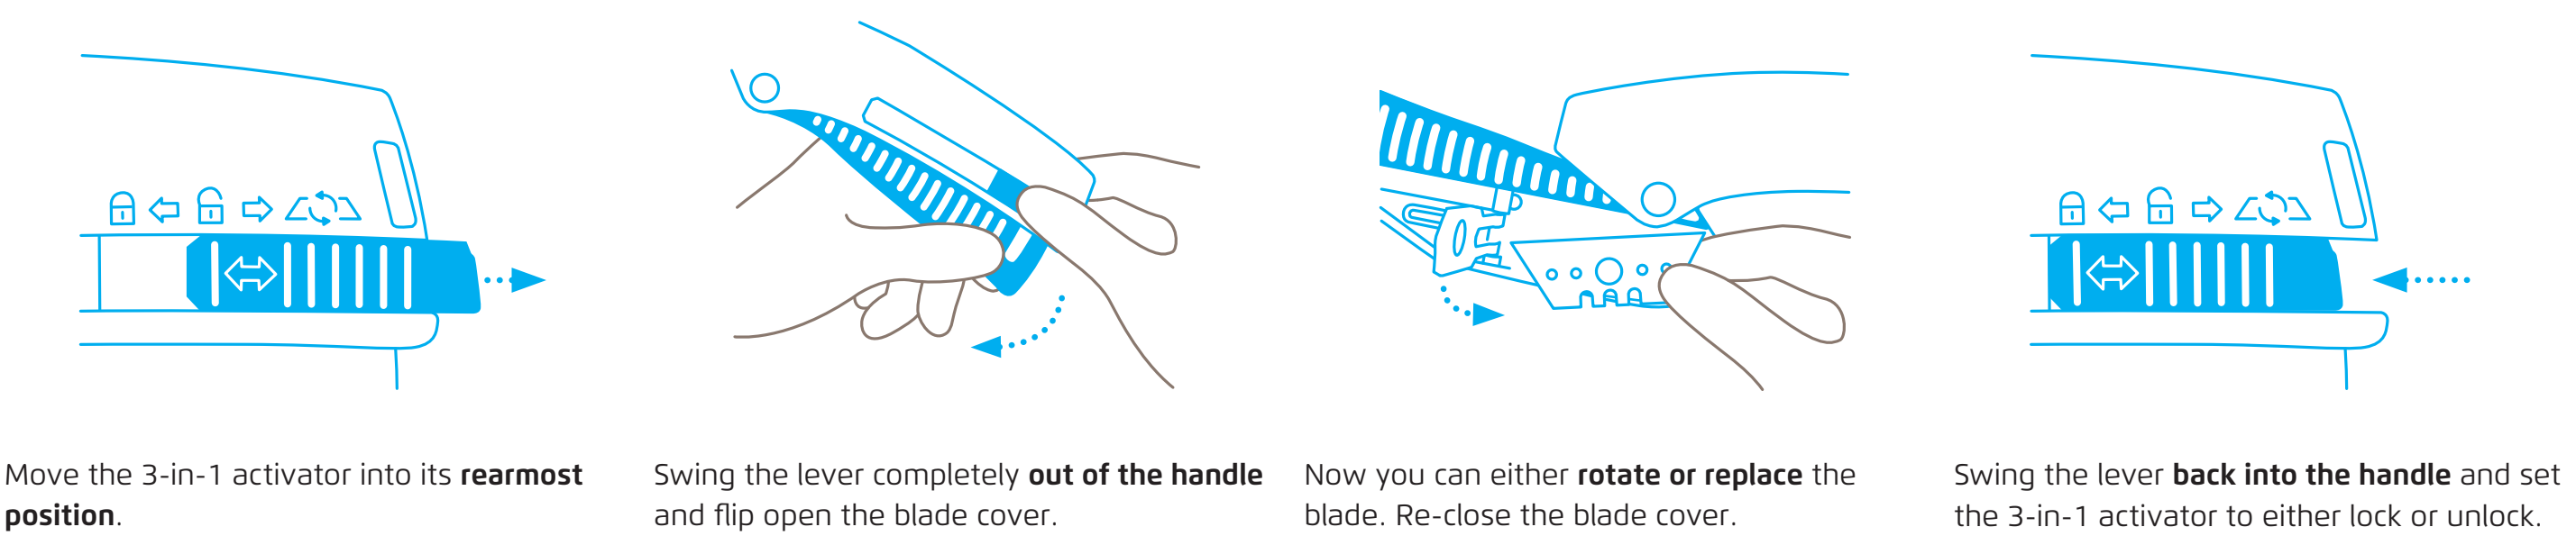


PROTECTION OF USER

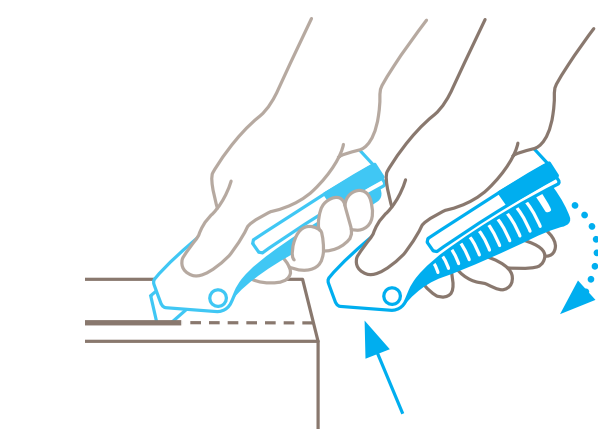


As soon as you **release the lever**, the blade disappears into the handle. And it stays there – until you engage it again.

DISPOSAL

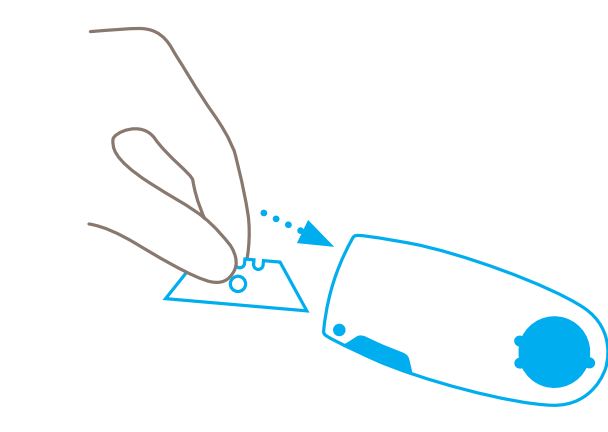

It is best to dispose of the **used blade** in your SAFEBOX.

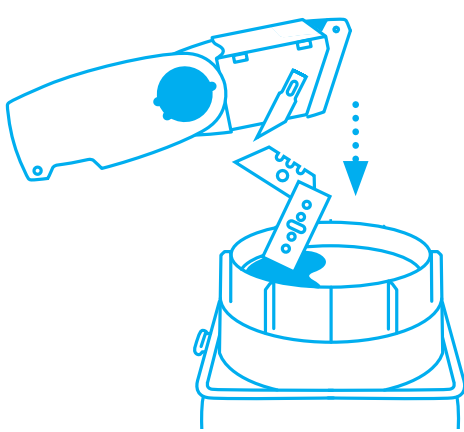

When the SAFEBOX is full, **empty all contents** into your USED BLADE CONTAINER.